

Notes regarding programming the Keyboard Encoder of a Cinemage:

In order to reprogram the Keyboard encoder of a Cinemage, you will need three things:

1. A properly formatted USB Key (please see <http://cine-tal.com/Download%20Library/Cine-tal%20File%20Structure%20Notes.pdf> for details)
2. An external USB keyboard
3. Encoder Programming updater (available at http://cine-tal.com/support/cinemage/update_usb_encoder.cup)

Once you have these items available, place the updater file into the “Cinetal” folder on the USB Key. Insert the USB Key into your Cinemage, and connect the USB Keyboard to the other available USB port. Once these items are installed on your Cinemage and the monitor is up and running, follow these steps:

1. The number keys 1-6 correspond with the six buttons on the front of the Cinemage, with 1 being the left-most key of the Cinemage, and 6 being the right-most key. Using these keys, navigate through the following series of button presses: Setup Menus (4)| Network and USB Setup (5)| USB Datakey Setup (6)| Updates (6)| Update from USB Key (2).
2. Allow the update to run fully. When the update completes the monitor will shut itself down.
3. Once the monitor is completely shut down, remove the USB Key and the USB Keyboard from the Cinemage.
4. Reboot the unit and test the Cinemage keys to see if they are functioning properly. If not, please repeat this procedure. If after repeating the procedure you are still experiencing issues, please contact Cine-tal Customer Support at (317) 576-0091, or support@cine-tal.com.