

# Cine-tal

Field Service Bulletin: #060530  
Title: Software Options - Field Upgrade  
Date: May 30, 2006

## Summary:

Cinemage version 1.26 provides the ability to upgrade software options via a file located on a USB data key. Upgrades may include the purchase or limited trials for software options on your Cinemage system such as waveform / vectorscope, test pattern generator, Dual Link, framestore, and 3D LUT . Below are the instructions to get upgrade your systems software options. (Note: some software options may require additional hardware. Consult Cine-tal technical support for more information)

## Instructions:

1. On your Cinemage system Navigate to: SYSTEM SETUP MENUS | NETWORK / USB DATAKEY SETUP | USB DATAKEY SETUP | UPDATES.
2. Verify that there is a menu selection called; GENERATE LICENCE LOCK CODE, if this menu is not shown verify that you have version 1.26 software.
3. Insert USB data key into your Cinemage system. When the key is inserted the menu will change to; PRESS TO GENERATE LOCK CODE.
4. Press the GENERATE LICENCE LOCK CODE button. It will now say; LOCK CODE GENERATED ON USB KEY.
5. Insert a USB data key (almost all USB memory or data keys will work) into your computer (Mac or PC).
6. Remove the usb datakey and place in a computer. In the Cinetal directory on the USB key a file named *lock\_abcdef.lic*, where abcdef is the last six digits of your systems serial number.
7. E-mail the \*.lic file to your Cine-tal dealer for processing.
8. Cine-tal will send to you via e-mail your original \*.lic file and its matching unlock license. Move both files downloaded from the e-mail to the folder named "cinetal" on the USB datakey. Make sure that the serial number on the \*.lic file matches the unit you are upgrading.
9. Insert the USB datakey into your Cinemage.
10. Navigate to: SYSTEM SETUP MENUS | NETWORK / USB DATAKEY SETUP | USB DATAKEY SETUP | UPDATES.
11. Press; PRESS TO RUN FEATURE UNLOCK button. UNLOCK RESULT will then be displayed, as either "Success" or "Error". Failures will typically result from mismatched or outdated lock/unlock files. Outdated files occur if you do multiple upgrades out of sequence.
12. Remove the USB datakey. Power-up the Cinemage and the upgrade will be in place.

<<END>>